



# PEACE OF MIND PROTECTION FOR THE ROAD AHEAD

## FORD MAINTENANCE AND RENTAL PLANS

	DESCRIPTION	TIME	DISTANCE
<b>FORD MAINTENANCE PROTECTION PLAN (FMPP)</b>	Covers scheduled maintenance, as outlined in your vehicle's Customer Information Guide (a.k.a. Owner Information Guide) and coverage on 8 wear items: spark plugs, shock absorbers, clutch disc, engine belts and hoses, wiper blades, brake pads, linings, rotors, lightbulbs (excluding headlamps).	<b>2 to 5 years</b>	<b>40,000 to 100,000</b>
<b>FORD MAINTENANCE PROTECTION PLAN PLUS! (FMPP PLUS!)</b>	3 year/75,000 km, 4 year/80,000 km, 4 year/100,000 km and 5 year/100,000 km Plus! Plans cover all of the above, but it also includes PremiumCARE component coverage after the expiration of the New Vehicle Basic Warranty.	<b>2 to 5 years</b>	<b>40,000 to 100,000</b>
<b>LIMITED MAINTENANCE PLAN (LMP)</b>	Cost-effective plan that covers oil and filter changes, 10-point inspections and tire rotations.	<b>1 to 4 years</b>	<b>20,000 to 80,000</b>
<b>LEASECARE</b>	First-day Rental reimbursement for repairs covered by the Basic Coverage under the New Vehicle Limited Warranty; the 3 year/75,000 km, 4 year/80,000 km and 4 year/100,000 km plans include PremiumCARE component coverage after the expiration of the New Vehicle Basic Warranty.	<b>2 to 4 years</b>	<b>50,000 to 100,000</b>

PLEASE NOTE:  
Time and distance limitations for Ford FMPP/ESP New Vehicle Plans are calculated from the time the vehicle is initially put into service and zero kilometers. Coverage for Ford ESP New Vehicle Plans expire upon reaching your selected time or distance travelled, whichever occurs first. Ford FMPP/ESP New Vehicle Plans are effective concurrent with the New Vehicle Basic Warranty and are not extensions of the New Vehicle Basic Warranty. Time and distance limitations for Ford ESP Used Vehicle Plans are calculated from the date and distance travelled on the vehicle at the time of delivery from the Dealer. Coverage expires upon reaching your selected time or distance travelled, whichever occurs first. Some eligibility limitations may apply. Ask your Ford or Ford Lincoln Dealer for details.

## POWERTRAIN CARE 29 COVERED COMPONENTS

Includes  
ROADSIDE  
ASSISTANCE

- ENGINE**
  - All Internal Lubricated Parts
  - Cylinder Block
  - Cylinder Heads
  - Flywheel
  - Manifold (Exhaust and Intake)
  - Oil Pan
  - Oil Pump
  - Seals and Gaskets
  - Thermostat
  - Thermostat Housing
  - Timing Chain Cover
  - Timing Chain (Gears or Belt)
  - Turbocharger/Supercharger Unit (Factory-installed)
  - Valve Covers
  - Water Pump
- TRANSMISSION**
  - All Internal Parts
  - Seals and Gaskets
  - Torque Converter
  - Transfer Case (Including All Internal Parts)
  - Transmission Case
- REAR-WHEEL DRIVE**
  - Axle Shafts
  - Bearings (Front and Rear)
  - Drive Axle Housing/Front Axle Housing for 4x4 (Including All Internal Parts)
  - Driveshaft
  - Retainers
  - Seals and Gaskets
  - Universal and Constant Velocity Joints
- FRONT-WHEEL DRIVE**
  - Axle Shafts
  - Bearings (Front and Rear)
  - Final Drive Housing/Rear Axle Housing for AWD (Including All Internal Parts)
  - Hubs, Automatic Front Locking (Four-wheel Drive)
  - Locking Rings (Four-wheel Drive)
  - Seals and Gaskets
  - Universal and Constant Velocity Joints

## BASECARE 84 COVERED COMPONENTS

Includes  
ROADSIDE  
ASSISTANCE

- ENGINE**
  - All Internal Lubricated Parts
  - Cylinder Block
  - Cylinder Heads
  - Diesel Injector Pump
  - Flywheel
  - Gas Fuel Injectors and Fuel Lines
  - Harmonic Balancer and Bolt
  - Manifold (Exhaust and Intake)
  - Oil Pan
  - Oil Pump
  - Seals and Gaskets
  - Thermostat
  - Thermostat Housing
  - Timing Chain Cover
  - Timing Chain (Gears or Belt)
  - Turbocharger/Supercharger Unit (Factory-installed)
  - Valve Covers
  - Water Pump
- TRANSMISSION**
  - All Internal Parts
  - Governor Assembly
  - Seals and Gaskets
  - Torque Converter
  - Transfer Case (Including All Internal Parts)
  - Transmission Case
- REAR-WHEEL DRIVE**
  - Axle Shafts
  - Bearings (Front and Rear)
  - Drive Axle Housing/Front Axle Housing for 4x4 (Including All Internal Parts)
  - Driveshaft
  - Retainers
  - Seals and Gaskets
  - Universal and Constant Velocity Joints
- FRONT-WHEEL DRIVE**
  - Axle Shafts
  - Bearings (Front and Rear)
  - Final Drive Housing/Rear Axle Housing for AWD (Including All Internal Parts)
  - Hubs, Automatic Front Locking (Four-wheel Drive)
  - Locking Rings (Four-wheel Drive)
  - Seals and Gaskets
  - Universal and Constant Velocity Joints
- STEERING**
  - Column Lock (Tilt Wheel)
  - Control Valve
  - Cooler and Lines
  - Idler Arm
  - Linkages and Couplings
  - Power Steering Pump
  - Pulley Assembly, Power Steering Pump
  - Seals and Gaskets
  - Steering Gear Housing, Manual and Power (Including All Internal Parts)
- BRAKES**
  - Backing Plates
  - Brake Booster (Power)
  - Calipers
  - Combination Valve
  - Lines and Fittings
  - Master Cylinder
  - Parking Brake Linkage and Cables
  - Retainers and Clips
  - Self-adjusters
  - Shaft (Brake Pedal)
  - Springs
  - Wheel Cylinders
- FRONT SUSPENSION**
  - Ball Joints (Upper and Lower)
  - Control Arm Shafts and Bushings
  - Control Arms (Upper and Lower)
  - Kingspins and Bushings
  - Linkage and Bushings
  - MacPherson Struts (Front and Rear)
  - Spindle and Spindle Supports
  - Stabilizer Bar
  - Tie Rods
- ELECTRICAL**
  - Alternator
  - Electronic Ignition Module
  - Fuel Pump
  - Heated Backglass (Electrical Only – Not Glass Damage or Breakage)
  - Ignition Switch
  - Radiator Fan Relay
  - Speedometer/Odometer (Electrical and Mechanical)
  - Starter Motor
  - Starter Motor Solenoid
  - Switches (Manually Operated Electrical)
  - Voltage Regulator
  - Wiper Motors
  - Wiring Harnesses (Excluding Spark Plug Wires)
- AIR CONDITIONING AND HEATING**
  - A/C Clutch
  - A/C Clutch Bearings
  - A/C Compressor
  - A/C Compressor/Clutch Switch
  - A/C Compressor Head
  - A/C Compressor Seals
  - A/C Condenser
  - Evaporator
  - Field Coil
  - Pulley

## EXTRACARE 113 COVERED COMPONENTS

Includes  
ROADSIDE  
ASSISTANCE

- ENGINE**
  - All Internal Lubricated Parts
  - Cylinder Block
  - Cylinder Heads
  - Diesel Injector Pump
  - Lines and Couplings
  - Diesel Lift Pump
  - Engine Mounts
  - Flywheel
  - Flywheel Ring Gear
  - Fuel Tank and Lines
  - Gas Fuel Injectors and Fuel Lines
  - Harmonic Balancer and Bolt
  - Manifold, Exhaust
  - Oil Pan
  - Oil Pump
  - Radiator and Radiator Fan
  - Radiator Fan Clutch or Motor
  - Seals and Gaskets
  - Thermostat
  - Thermostat Housing
  - Timing Chain Cover
  - Timing Chain (Gears or Belt)
  - Turbocharger/Supercharger Unit (Factory-installed)
  - Valve Covers
  - Water Pump
- STEERING**
  - Column Lock (Tilt Wheel)
  - Control Valve
  - Cooler and Lines
  - Idler Arm
  - Linkages and Couplings
  - Power Steering Pump
  - Pulley Assembly
  - Seals and Gaskets
  - Steering Gear Housing, Manual and Power (Including All Internal Parts)
- BRAKES**
  - Anti-lock Brake Module and Sensor
  - Backing Plates
  - Brake Booster (Power)
  - Calipers
  - Combination Valve
  - ETA Pump Hose Assembly
  - Lines and Fittings
  - Master Cylinder
  - Parking Brake Linkage and Cables
  - Retainers and Clips
  - Self-adjusters
  - Shaft (Brake Pedal)
  - Springs
  - Wheel Cylinders
- FRONT SUSPENSION**
  - Ball Joints (Upper and Lower)
  - Control Arms (Upper and Lower)
  - Control Arm Shafts and Bushings
  - Kingspins and Bushings
  - Linkage and Bushings
  - MacPherson Struts (Front and Rear)
  - Spindle and Spindle Supports
  - Stabilizer Bar
  - Tie Rods
- REAR-WHEEL DRIVE**
  - All Internal Parts
  - Governor Assembly
  - Seals and Gaskets
  - Torque Converter
  - Transfer Case (Including All Internal Parts)
  - Transmission Case
  - Transmission Module, External
  - Transmission Mounts
  - Transmission Vacuum Module
- FRONT-WHEEL DRIVE**
  - Axle Shafts
  - Bearings (Front and Rear)
  - Drive Axle Housing/Front Axle Housing for 4x4 (Including All Internal Parts)
  - Driveshaft
  - Retainers
  - Seals and Gaskets
  - Universal and Constant Velocity Joints
- ELECTRICAL**
  - Alternator
  - Distributor Assembly
  - Distributor Cap and Rotor
  - Electronic Ignition Module
  - Fuel Pump
  - Heated Backglass (Electrical Only – Not Glass Damage or Breakage)
  - Ignition Switch
  - Radiator Fan Relay
  - Speedometer/Odometer (Electrical and Mechanical)
  - Starter Motor
  - Starter Motor Solenoid
  - Switches (Manually Operated Electrical)
  - Voltage Regulator
  - Wiper Motors
  - Wiring Harnesses (Excluding Spark Plug Wires)
- AIR CONDITIONING AND HEATING**
  - A/C Accumulator
  - A/C Clutch
  - A/C Clutch Bearings
  - A/C Compressor
  - A/C Compressor/Clutch Switch
  - A/C Compressor Head
  - A/C Compressor Seals
  - A/C Condenser
  - Evaporator
  - Field Coil
  - Pulley

# PREMIUMCARE 500+ COVERED COMPONENTS

Includes  
ROADSIDE  
ASSISTANCE

# PC Plus

This 5 year/100,000 km plan covers all PremiumCARE components, PLUS a \$0 deductible with First-day Rental coverage up to \$35/day for up to 10 days.

ENGINE	TRANSMISSION	FRONT-WHEEL DRIVE	BRAKES	ELECTRICAL	AIR CONDITIONING AND HEATING	HIGH-TECH	EMISSIONS	FORD AUDIO	SAFETY (continued)
<ul style="list-style-type: none"> <li>All Internal Lubricated Parts</li> <li>Cylinder Block</li> <li>Cylinder Heads</li> <li>Diesel Injector and Fuel Lines</li> <li>Diesel Injector Pump</li> <li>Diesel Lift Pump</li> <li>Engine Mounts</li> <li>Flywheel</li> <li>Flywheel Ring Gear</li> <li>Fuel Tank and Lines</li> <li>Gas Fuel Injectors and Fuel Lines</li> <li>Harmonic Balancer and Bolt</li> <li>Manifold (Exhaust and Intake)</li> <li>Oil Pan</li> <li>Oil Pump</li> <li>Radiator</li> <li>Radiator Fan (Clutch or Motor)</li> <li>Seals and Gaskets</li> <li>Thermostat</li> <li>Thermostat Housing</li> <li>Timing Chain Cover</li> <li>Timing Chain (Gears or Belt)</li> <li>Turbocharger/Supercharger Unit (Factory-installed)</li> <li>Valve Covers</li> <li>Water Pump</li> </ul>	<ul style="list-style-type: none"> <li>All Internal Parts</li> <li>Governor Assembly</li> <li>Kickdown Linkage</li> <li>Release Hubs and Bearings</li> <li>Seals and Gaskets</li> <li>Torque Converter</li> <li>Transfer Case (Including All Internal Parts)</li> <li>Transmission Case</li> <li>Transmission Linkage</li> <li>Transmission Module (External)</li> <li>Transmission Mounts</li> <li>Transmission Vacuum Module</li> </ul>	<ul style="list-style-type: none"> <li>Axle Shafts</li> <li>Bearings (Front and Rear)</li> <li>Final Drive Housing (Including All Internal Parts)</li> <li>Hubs, Automatic Front Locking (Four-wheel Drive)</li> <li>Locking Rings (Four-wheel Drive)</li> <li>Seals and Gaskets</li> <li>Universal and Constant Velocity Joints</li> </ul>	<ul style="list-style-type: none"> <li>Anti-lock Brake Module and Sensor</li> <li>Backing Plates</li> <li>Brake Booster (Power)</li> <li>Calipers</li> <li>Combination Valve</li> <li>ETA Pump Hose Assembly</li> <li>Lines and Fittings</li> <li>Master Cylinder</li> <li>Parking Brake Linkage and Cables</li> <li>Retainers and Clips</li> <li>Self-adjusters</li> <li>Shaft (Brake Pedal)</li> <li>Springs</li> <li>Wheel Cylinders</li> </ul>	<ul style="list-style-type: none"> <li>Alternator</li> <li>Charge and Volt Gauges</li> <li>Clock (Electric)</li> <li>Distributor Assembly</li> <li>Distributor Cap and Rotor</li> <li>Distributor Housing and Shaft</li> <li>Electronic Ignition Module</li> <li>Fuel Pump</li> <li>Heated Backglass (Electrical Only – Not Glass Damage or Breakage)</li> <li>Ignition Coil, Lock and Electric Module</li> <li>Ignition Switch</li> <li>Mirrors (Electrical Only – Not Glass Damage or Breakage)</li> <li>Radiator Fan Relay</li> <li>Speedometer/Odometer (Electrical and Mechanical)</li> <li>Starter Motor</li> <li>Starter Motor Solenoid</li> <li>Switches (Manually Operated Electrical)</li> <li>Temperature Gauge</li> <li>Voltage Regulator</li> <li>Wiper Motors</li> <li>Wiring Harnesses (Excluding Spark Plug Wires)</li> </ul>	<ul style="list-style-type: none"> <li>A/C Accumulator</li> <li>A/C Clutch</li> <li>A/C Clutch Bearings</li> <li>A/C Compressor</li> <li>A/C Compressor/Clutch Switch</li> <li>A/C Compressor Head</li> <li>A/C Compressor Seals</li> <li>A/C Condenser</li> <li>Automatic Temperature Control</li> <li>Evaporator</li> <li>Field Coil</li> <li>Heater Blower Motor</li> <li>Heater Control Cables</li> <li>Heater Core Assembly</li> <li>Instrument Panel Registers and Air Ducts</li> <li>Pulley</li> </ul>	<ul style="list-style-type: none"> <li>Air Suspension, Electronic (Selected Components)</li> <li>Anti-theft Alarm (Factory-installed)</li> <li>Compass and Thermometer Readout Displays</li> <li>FordLink™ System</li> <li>Fuel Mixer (Alternative)</li> <li>In-dash Navigation System (Factory-installed)</li> <li>Instrument Cluster, Electronic (Excluding Dash Pad Clock, Audio and Visual Equipment)</li> <li>Keyless Entry System (Excluding Door Handles)</li> <li>Power Antenna</li> <li>Power Door Locks and Retainer Clips (Excluding Door Handles)</li> <li>Power Seat Motors</li> <li>Power Window Motors/Regulators</li> <li>Sensor (Alcohol)</li> <li>Speed Control</li> </ul>	<ul style="list-style-type: none"> <li>Air Check Valve Assembly</li> <li>Air Control Valve</li> <li>Air Idle Vacuum Valve</li> <li>Air Supply Valve (Hose and Tube)</li> <li>Barometric Pressure Sensor</li> <li>ECC Relay Assembly</li> <li>EGR Control Valve</li> <li>EGR Pressure Sensor</li> <li>EGR Regulator Assembly</li> <li>EGR Valve Adapter</li> <li>EVAP Vapor Storage Canister</li> <li>Idler Air Control Valve</li> <li>Knock Sensor</li> <li>PCV Hose Assembly</li> <li>PCV Valve</li> <li>PCV Vapor Filter</li> <li>Temperature Sensor (Engine Coolant)</li> <li>Vacuum Restrictor</li> <li>VAF Sensor</li> </ul>	<ul style="list-style-type: none"> <li>Antenna, Radio (Base Assembly)</li> <li>Brackets</li> <li>Cables and Wiring</li> <li>Cellular Phone, Receiver, Handset, Speaker Assembly and Antenna (Factory-installed)</li> <li>Controls (Rear Seat)</li> <li>Radio (AM/FM), Speakers, Cassette Player, Digital CD Player, Graphic Equalizer, Premium Sound Amplifier (Factory-installed)</li> <li>Rear Entertainment System (Factory-installed)</li> </ul>	<ul style="list-style-type: none"> <li>Head Restraint Retainers and Sleeves (Safety Belt)</li> <li>Key, SecurLock® (Microchip Encoded Key)</li> <li>Lock Cylinder (Door)</li> <li>Lock Lever Assembly (Door)</li> <li>Lock Lever Assembly (Tailgate)</li> <li>Lock Lever Retainers, Clips and Brackets</li> <li>Module (Passive Restraint)</li> <li>Safety Belt Buckle (Front and Rear)</li> <li>Safety Belt Motor Drive Assembly</li> <li>Safety Belt Restraint Carrier</li> <li>Safety Belt Retractors</li> <li>Safety Belt Track Assembly</li> <li>Safety Belt Warning Chime Assembly</li> <li>Sensors (Air Bag)</li> <li>Shoulder Strap Track Assembly</li> <li>Guides, Bezels, Brackets and Supports (Safety Belts/Shoulder Straps)</li> </ul>
<p><b>SAFETY (continued)</b></p> <ul style="list-style-type: none"> <li>Head Restraint Retainers and Sleeves (Safety Belt)</li> <li>Key, SecurLock® (Microchip Encoded Key)</li> <li>Lock Cylinder (Door)</li> <li>Lock Lever Assembly (Door)</li> <li>Lock Lever Assembly (Tailgate)</li> <li>Lock Lever Retainers, Clips and Brackets</li> <li>Module (Passive Restraint)</li> <li>Safety Belt Buckle (Front and Rear)</li> <li>Safety Belt Motor Drive Assembly</li> <li>Safety Belt Restraint Carrier</li> <li>Safety Belt Retractors</li> <li>Safety Belt Track Assembly</li> <li>Safety Belt Warning Chime Assembly</li> <li>Sensors (Air Bag)</li> <li>Shoulder Strap Track Assembly</li> <li>Guides, Bezels, Brackets and Supports (Safety Belts/Shoulder Straps)</li> </ul>									

These are the only components not covered by Ford ESP PremiumCARE:

**MECHANICAL** – Service adjustments and cleaning, battery and cables, belts and hoses, brakes (front hub, drums, shoes, linings, disc rotors, pads), coolant, exhaust system (includes catalytic converter), filters, fluids, lubricants, lights (bulbs, sealed beam, lenses), manual clutch disc, shock absorbers, spark plugs and wires, squeaks and rattles, tires, tune-ups, wheel balancing, wheel alignment, wiper blades, wheel studs and compressed natural gas/liquid propane fuel system components.

**EXTERIOR** – Service adjustments (glass and body parts), bright metal bumpers, door handles, glass, mouldings, ornamentation, paint, rust, sheet metal, structural underbody framework, sideview mirrors (glass and housing), water leaks, wind noise, weatherstrips, wheels, wheel covers and ornaments, convertible top, fabric, zippers and fasteners.  
**INTERIOR** – Buttons, carpets, dash pad, door and window handles, knobs, rearview mirror (glass and housing), trim, and upholstery.

Even regular maintenance can't protect you against an accident or other emergency. That's why **Ford Extended Service Plans** also include comprehensive **Roadside Assistance**, covering:

- Emergency maintenance services including flat tire change, fuel delivery and battery jump-start
- Lockout assistance
- No charge towing to the nearest Ford or Ford Lincoln Dealer

THE PLAN EVEN PROVIDES TRAVEL EXPENSE REIMBURSEMENT AND TRIP-PLANNING SERVICES.



**GENUINE PARTS.  
GENUINE SERVICE.  
GENUINE PEACE OF MIND.**